



120101 (01-06)

Concealed thermostatic valve

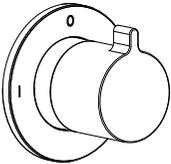


120105 (01-06)

Concealed stop valve

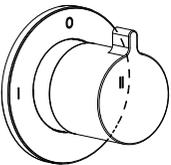


120103 (01-06)

2-way concealed diverter (including closing function)

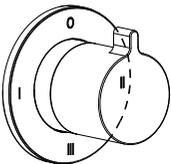

120106 (01-06)

3-way concealed diverter (including closing function)

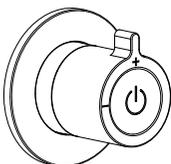

120108 (01-06)

Push-button concealed stop valve with flow adjustment

CONTENT

120101	(See page 02-05)
120105	(See page 06-07)
120103	(See page 08-09)
120106	(See page 10-11)
120108	(See page 12-13)

Vertical installation - Standard

120101+120103	(See page 14)
120101+120106	
120101+120105+120105	(See page 15)
120101+120105+120103	
120101+120108+120108	(See page 18)

Horizontal installation

120101+120103	(See page 16)
120101+120106	
120101+120105+120105	(See page 17)
120101+120105+120103	
120101+120108+120108	(See page 19)

OPERATING SPECIFICATIONS

Hot Water Supply Temperature:
Maximum: 60-65° C


Recommended Operating Pressure:
1Bar - 5Bar

FLOW RATE

Code	Photo	1 Bar (L/MIN)	2 Bar (L/MIN)	3 Bar (L/MIN)	4 Bar (L/MIN)	5 Bar (L/MIN)
120101		17	24.8	30	34.7	39
120105 -(Tested with 120101)		13.7	20.1	24.8	28.7	32.1
120103 -(Tested with 120101)		12.5	18.4	22.5	26.3	29.4
120106 -(Tested with 120101)		12.5	18.4	22.5	26.3	29.4
120108 -(Tested with 120101)		MAX:12 MIN:4.6	MAX:18 MIN:6.5	MAX:22.4 MIN:6.8	MAX:26 MIN:7.3	MAX:29 MIN:7.3

Installation Instructions


- Prior to installation, inspect the product for transport damages. After it has been installed, no transport or surface damage will be honoured.
- The pipes and the fixture must be installed, flushed and tested as per the applicable standards.
- The plumbing codes applicable in the respective countries must be observed
- The outlet temperature during testing was 40°C.

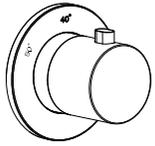


120101 (01-06)

Concealed thermostatic valve





Dimension Drawing

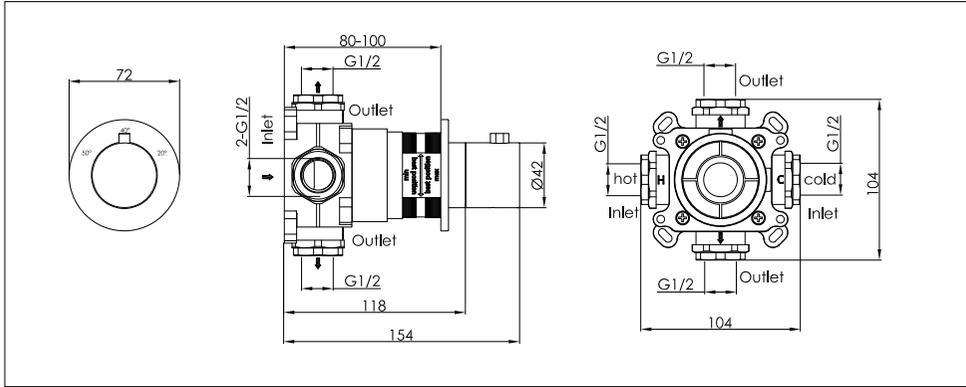


Explosive Drawing

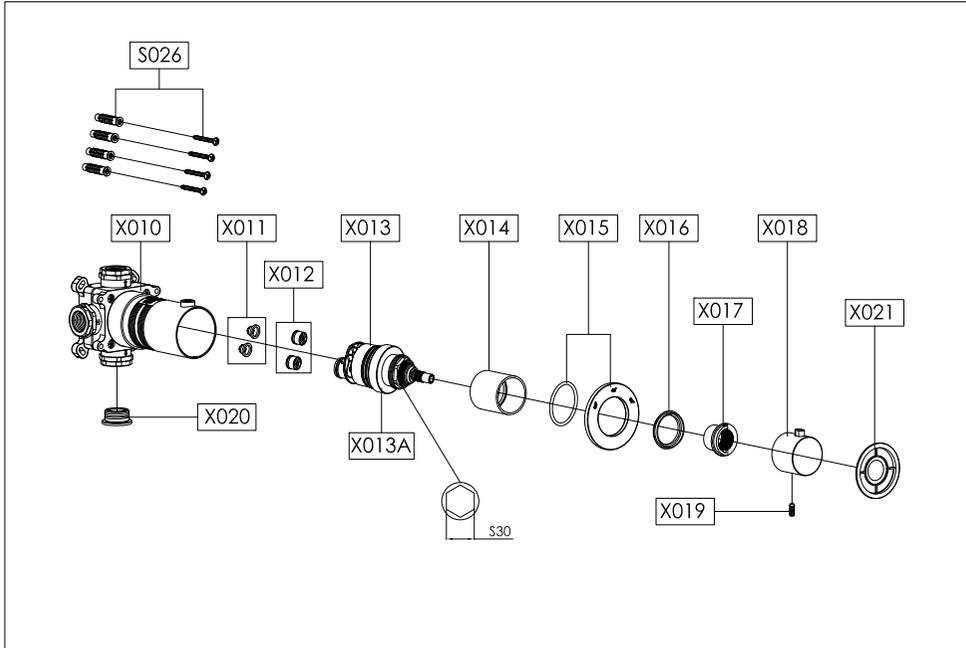


Installation Steps

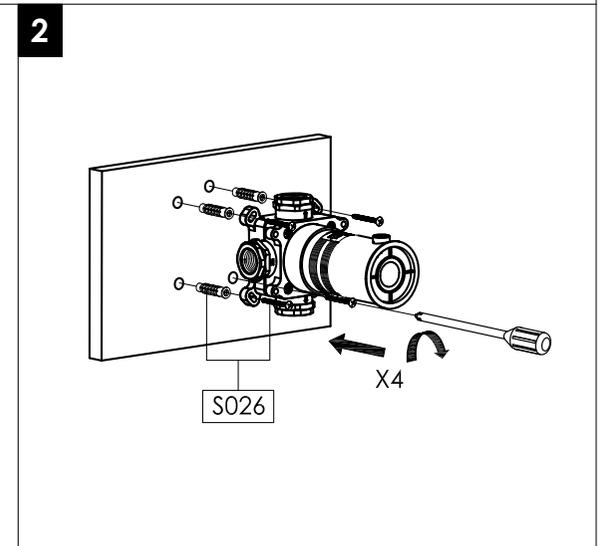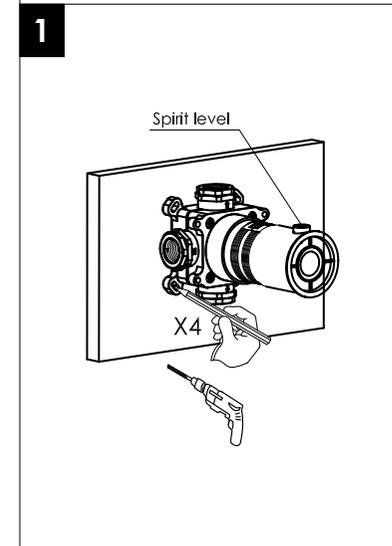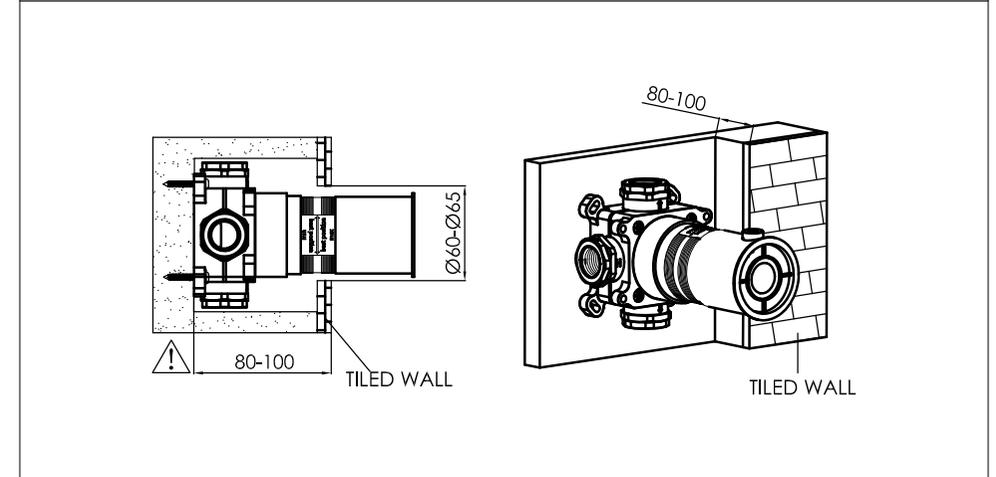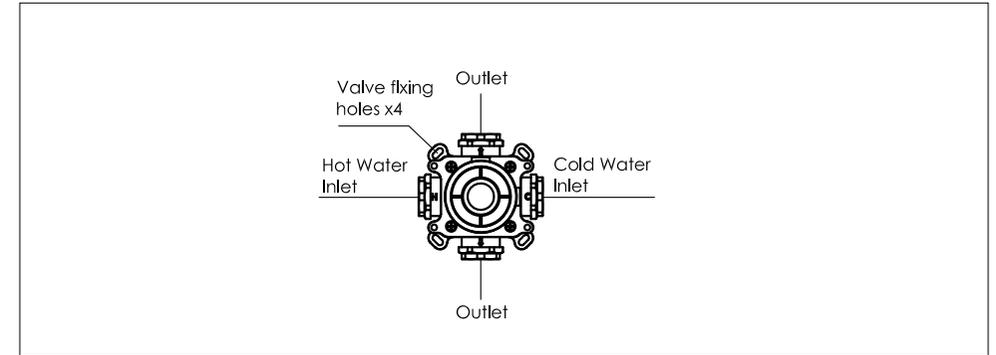


3

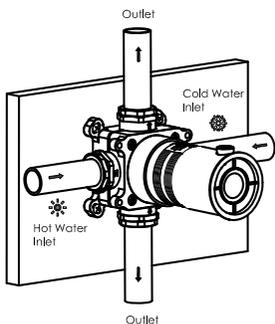


4

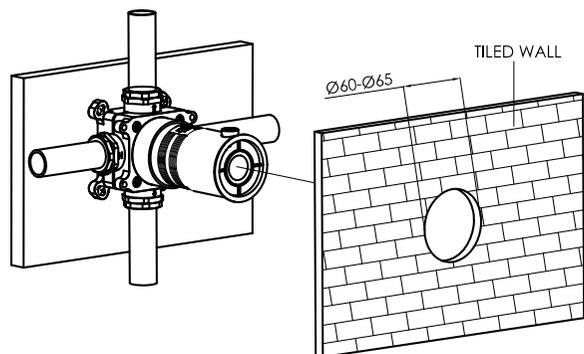


5

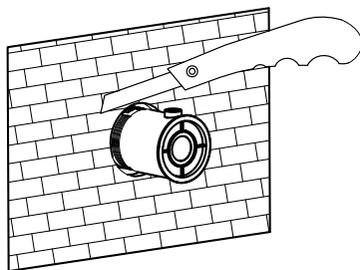


6

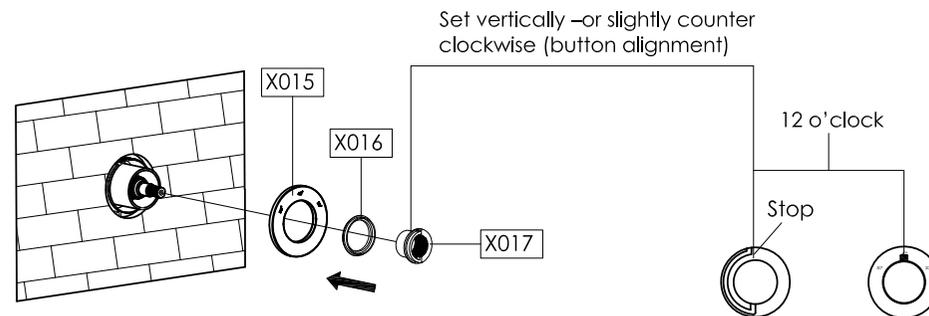


7

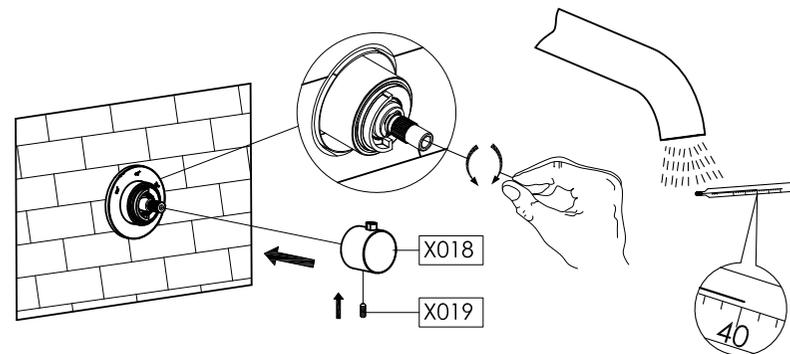

8

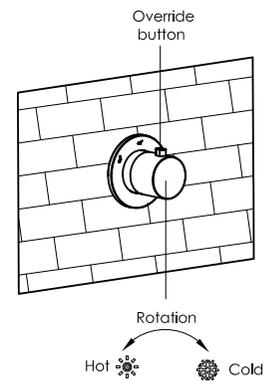


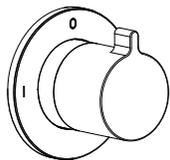


120105 (01-06)

Concealed stop valve


Dimension Drawing

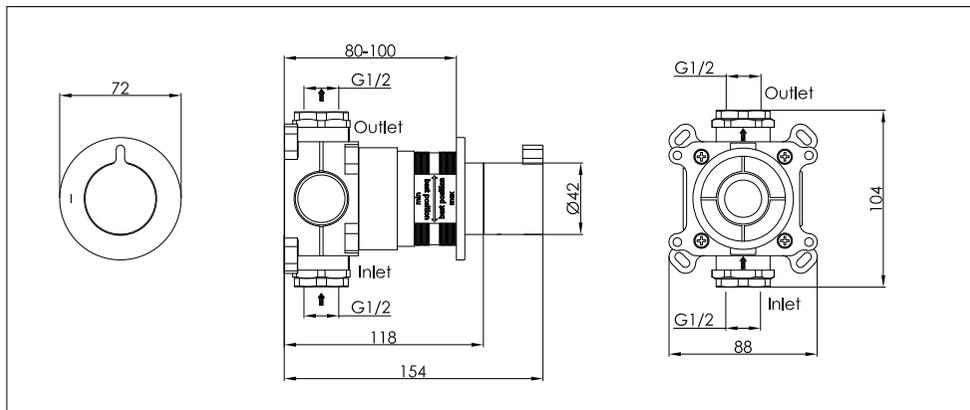


Explosive Drawing

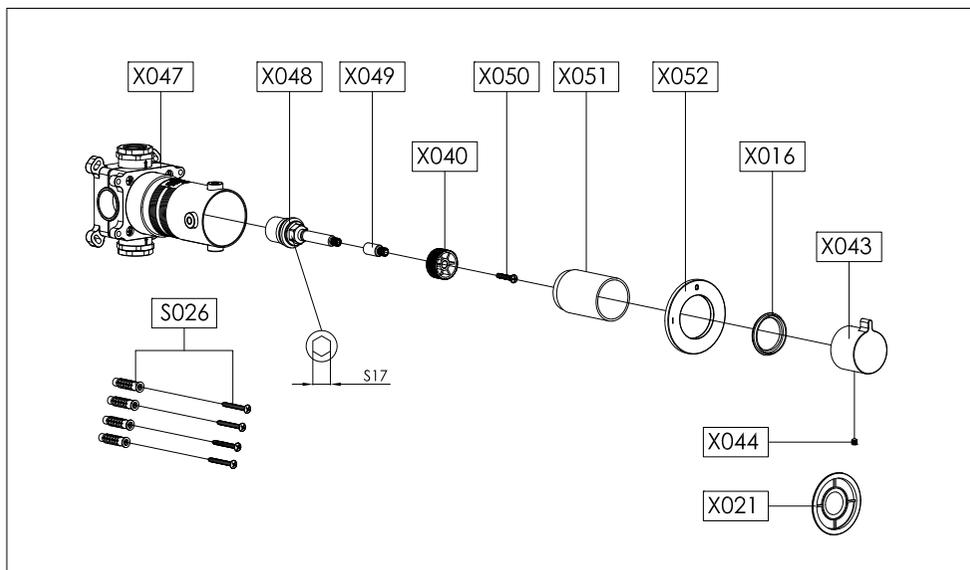

Installation Steps

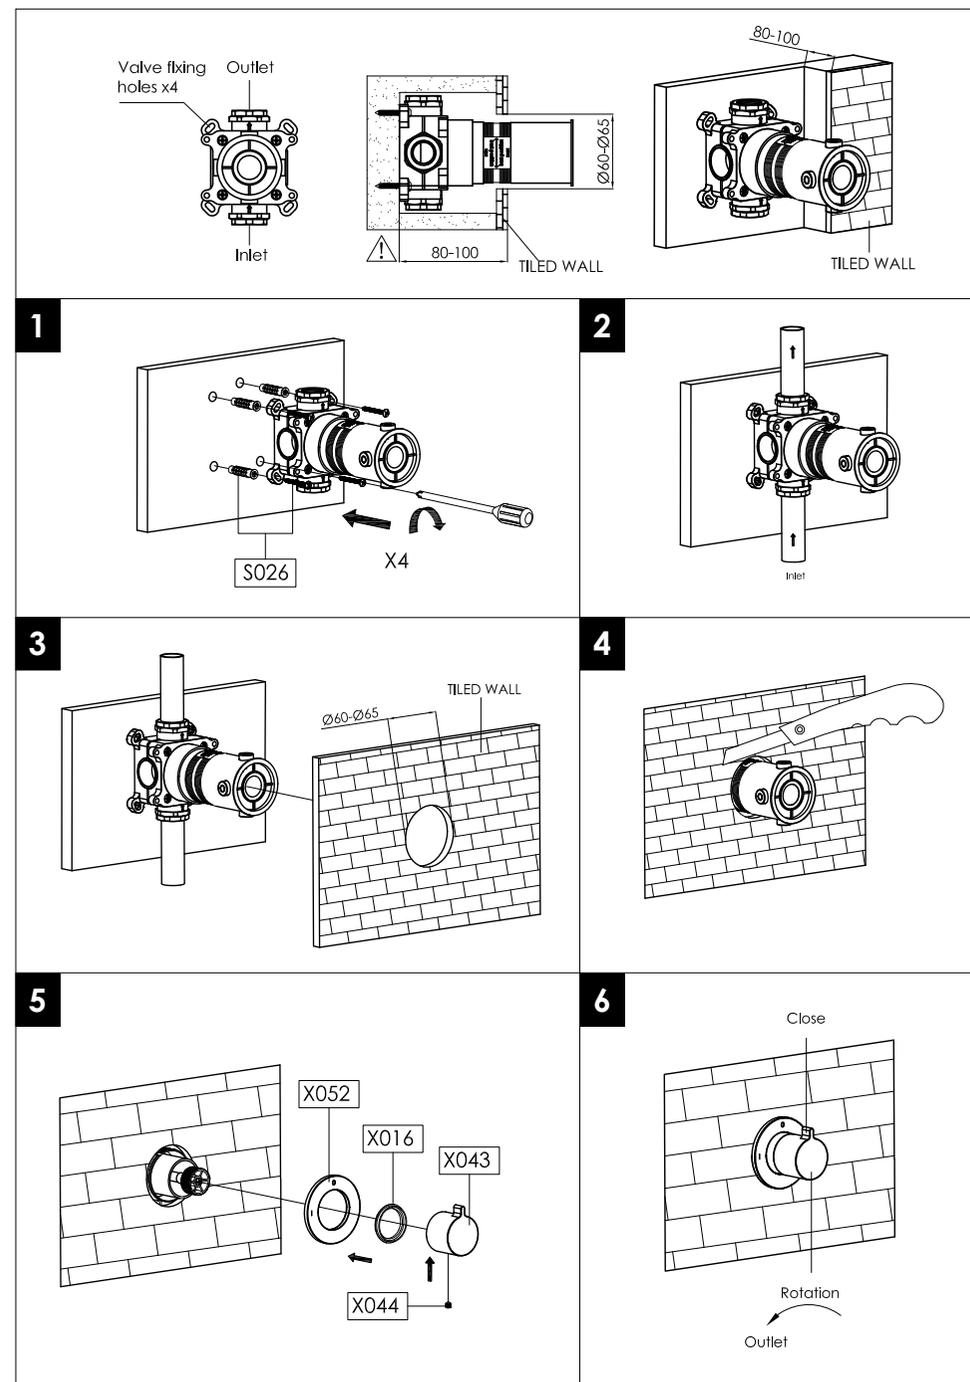


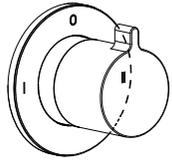


120103 (01-06)

2-way concealed diverter (including closing function)


Dimension Drawing

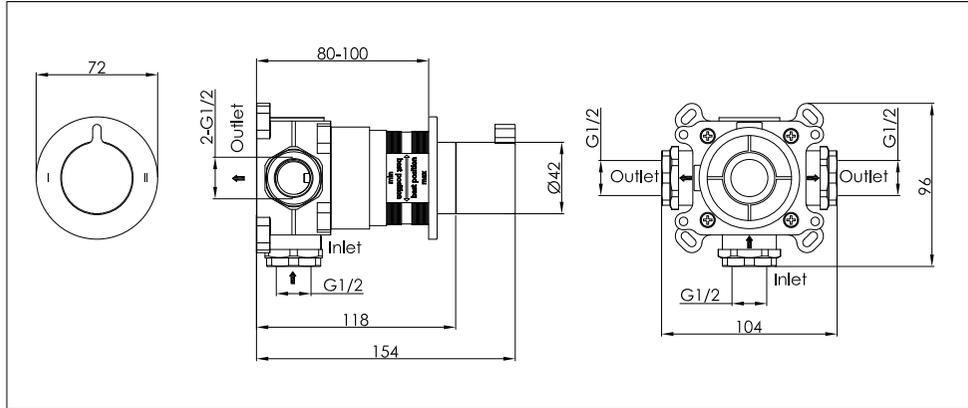


Explosive Drawing

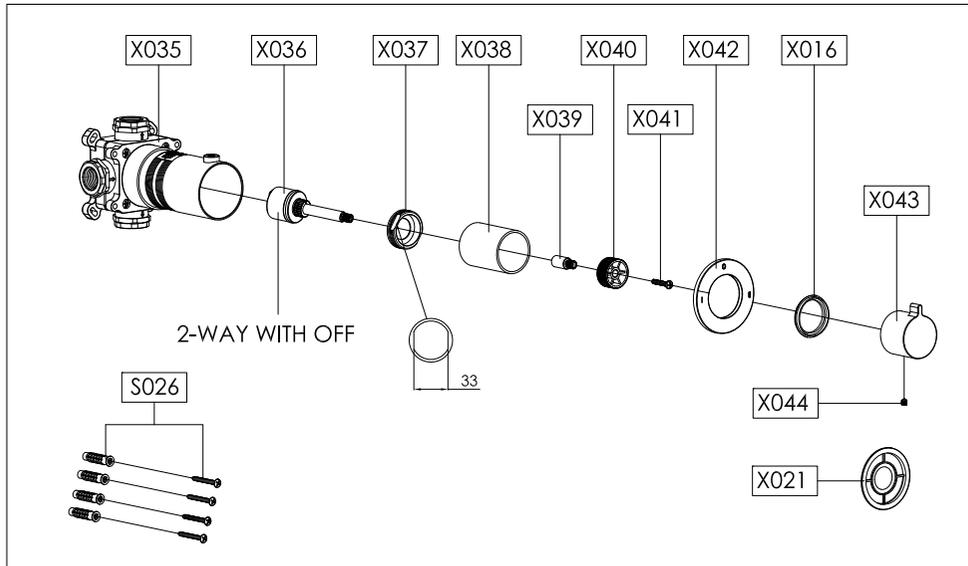

Installation Steps

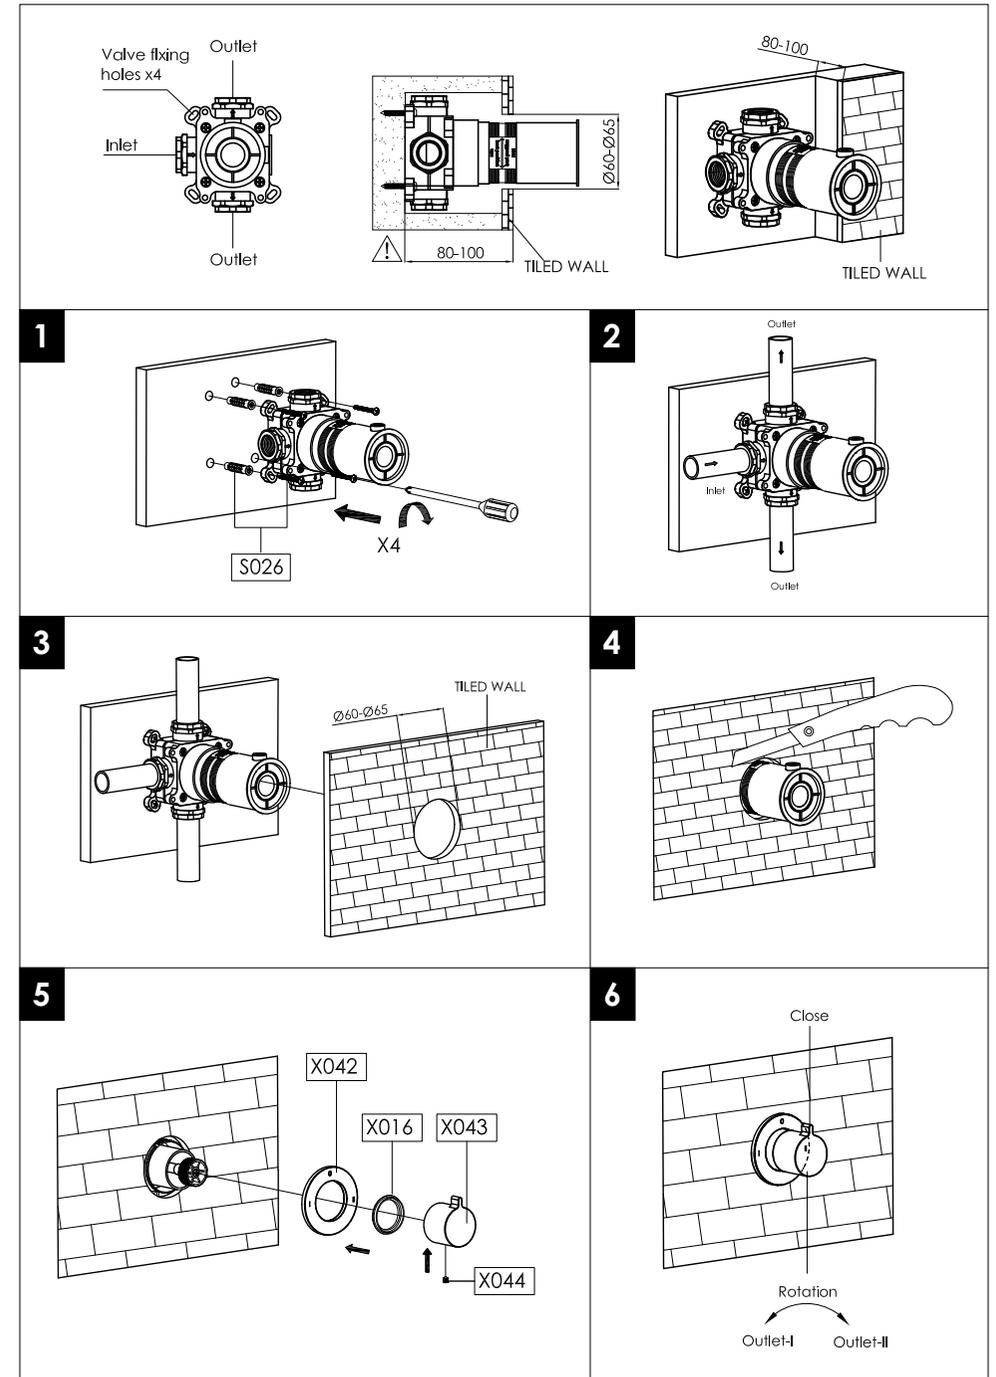


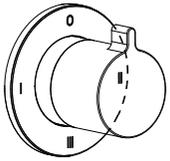


120106 (01-06)

3-way concealed diverter (including closing function)


Dimension Drawing

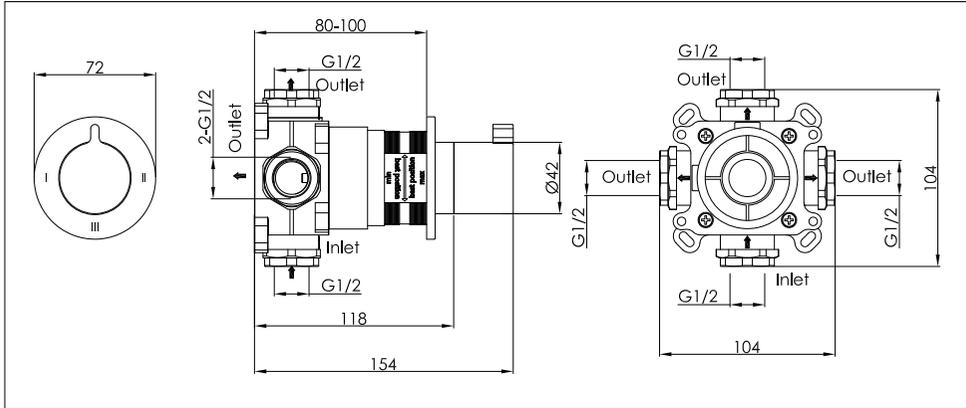


Explosive Drawing

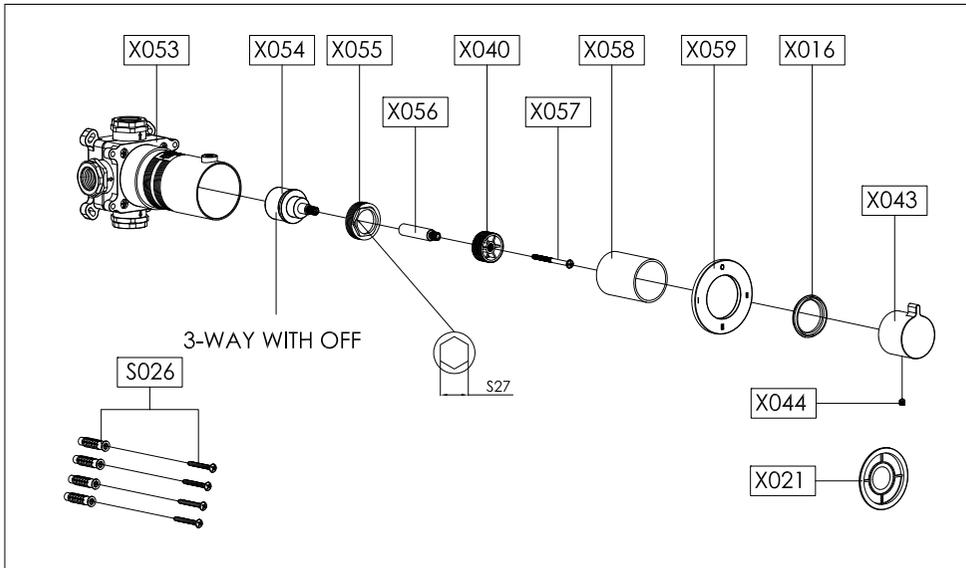

Installation Steps

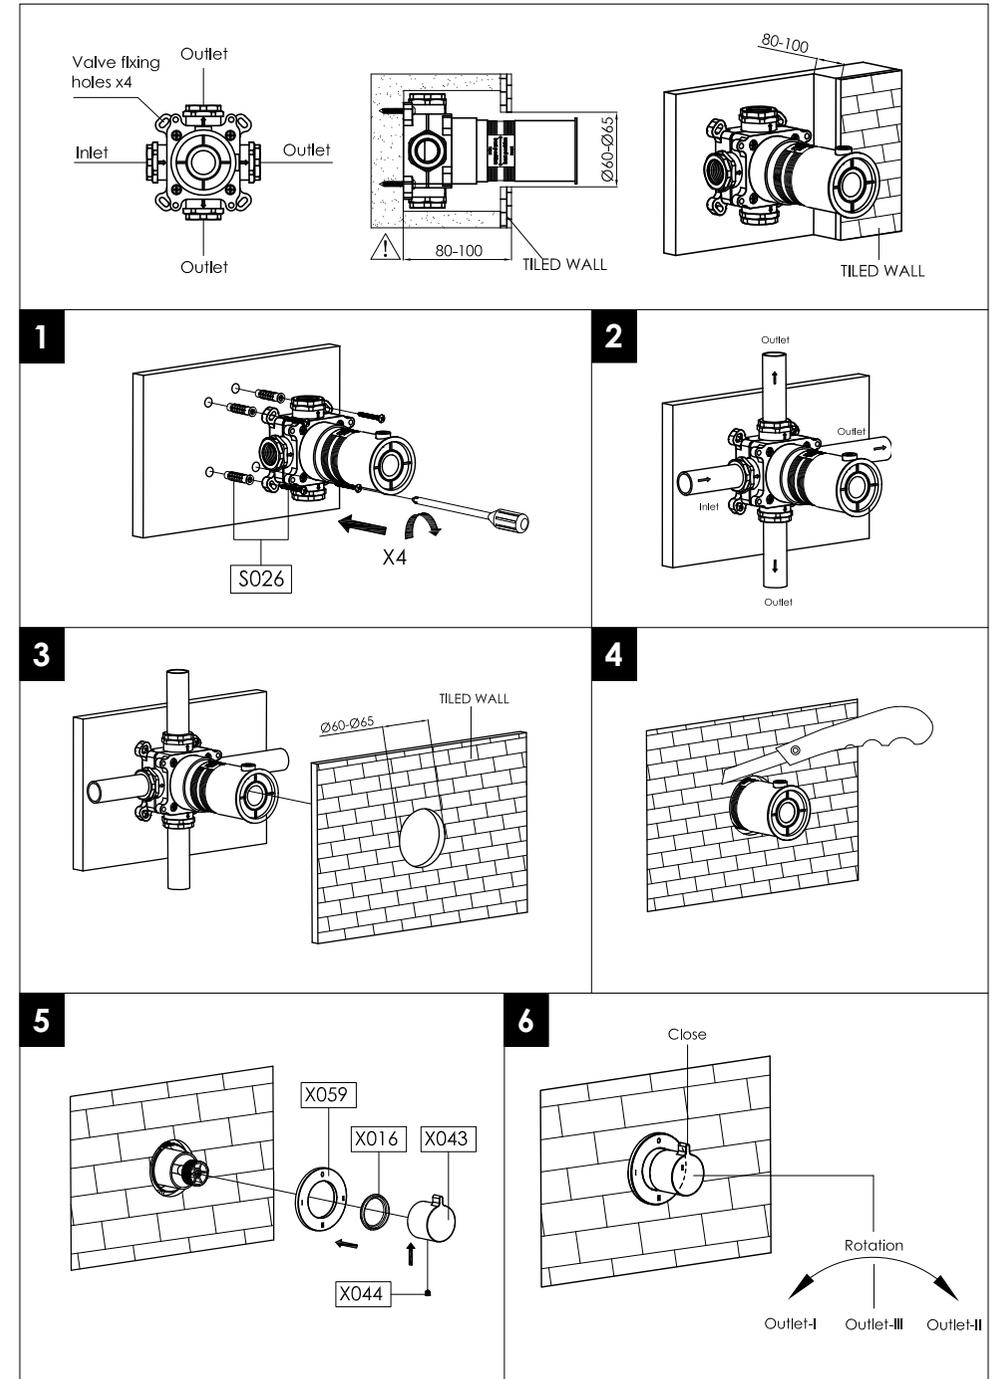


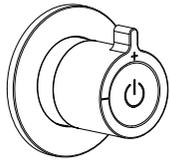


120108 (01-06)

Push-button concealed stop valve with flow adjustment


Dimension Drawing

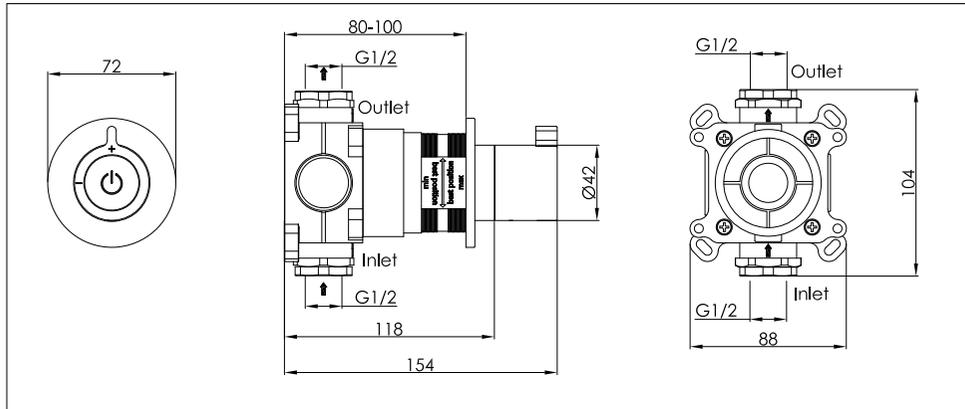

Explosive Drawing

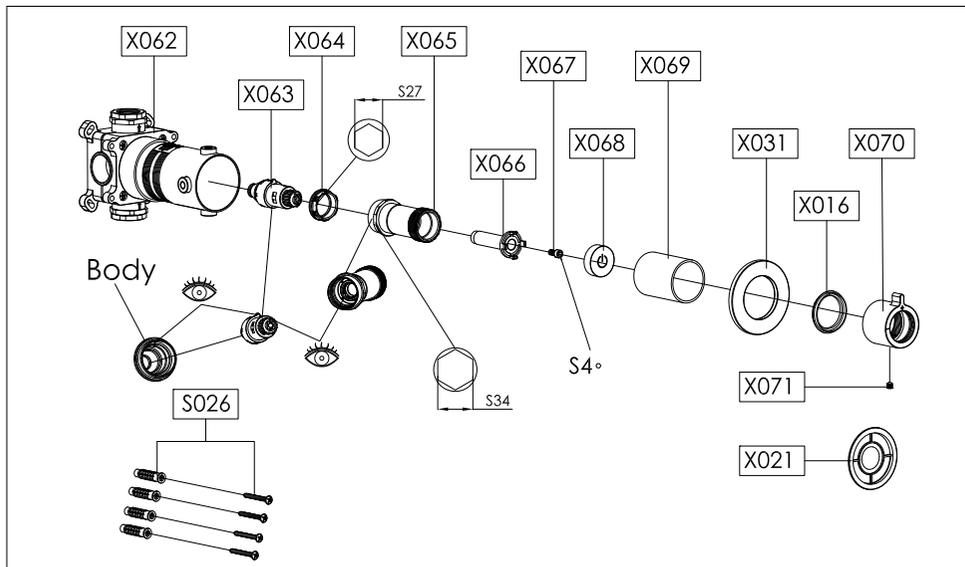


Installation Steps

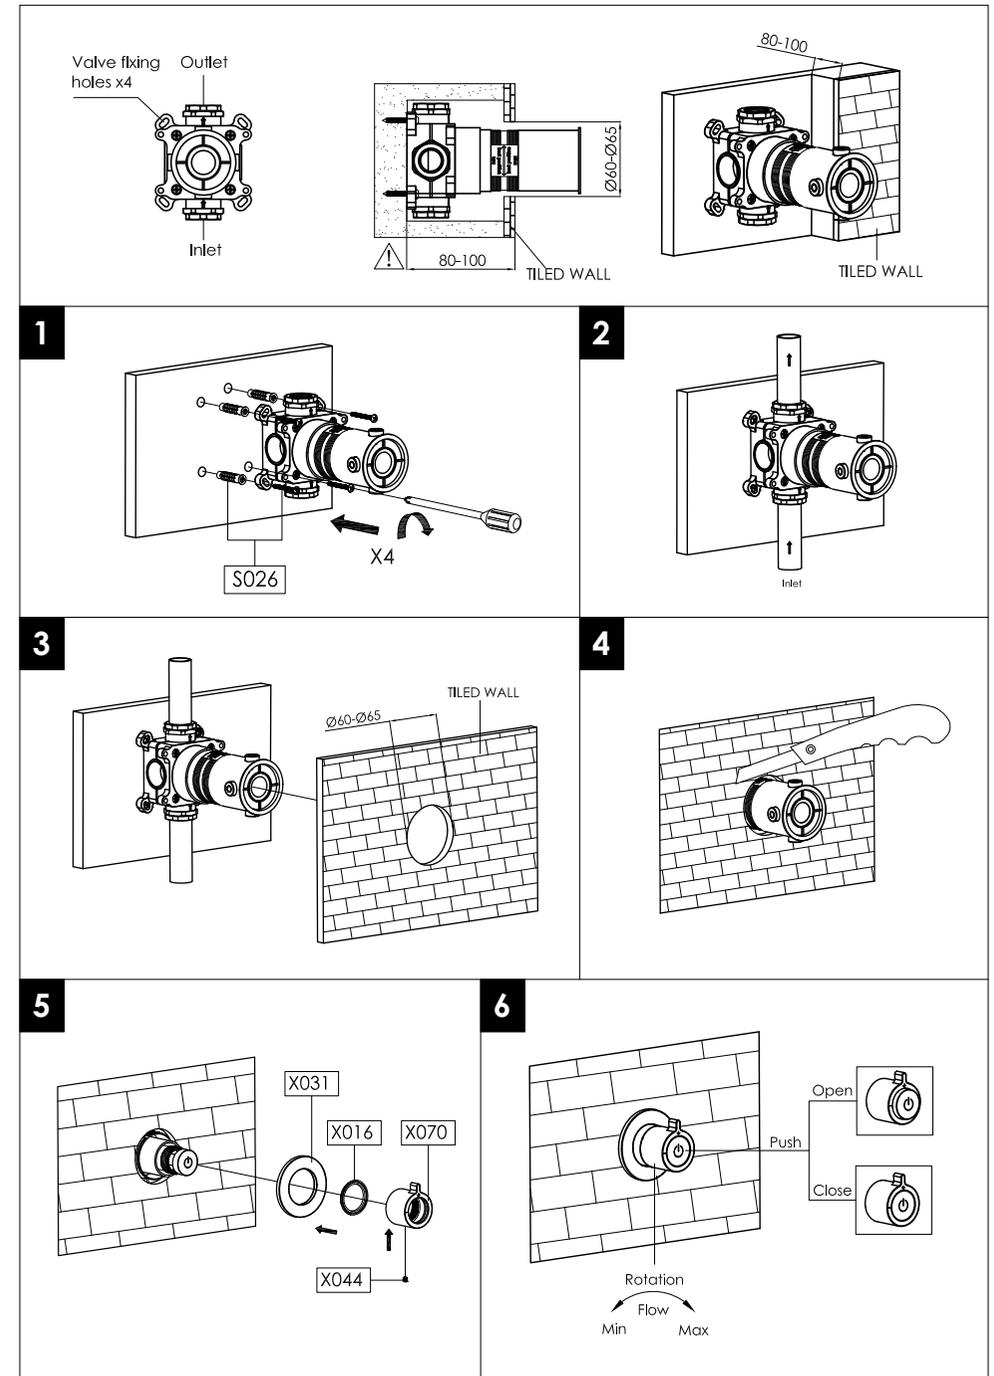

Vertical mounting instructions (Standard installation)

-2 and 3 outlet


120101+120103

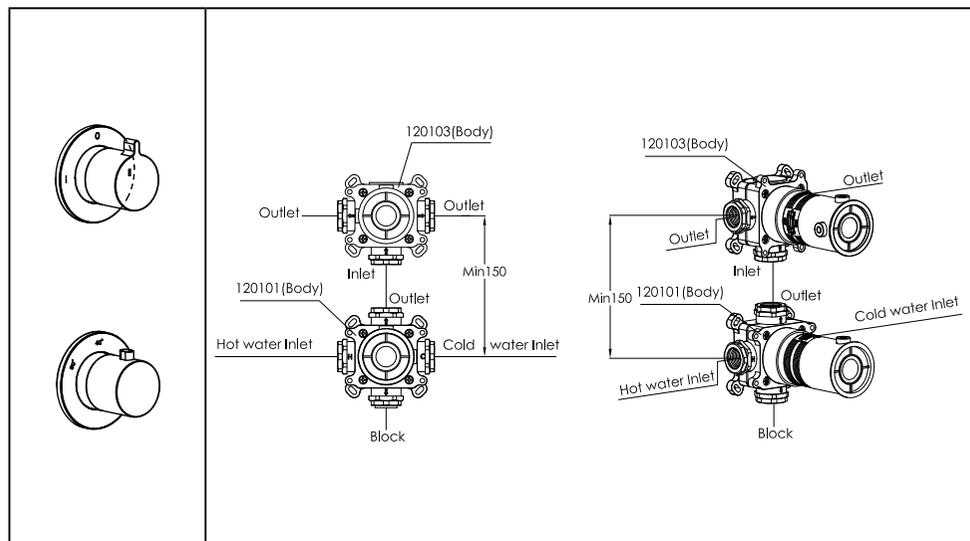


Vertical mounting instructions (Standard installation)

-2 and 3 outlet


120101+120105+120105

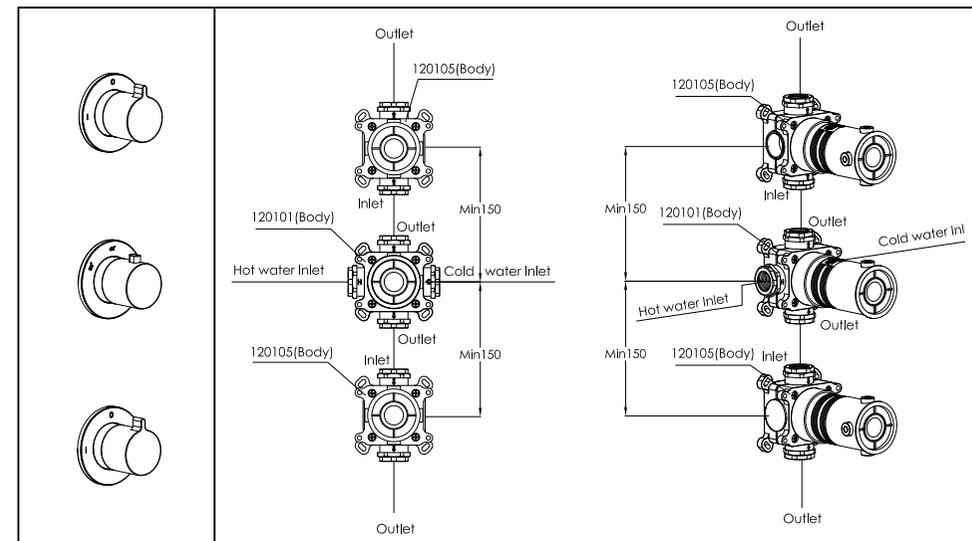


120101+120106

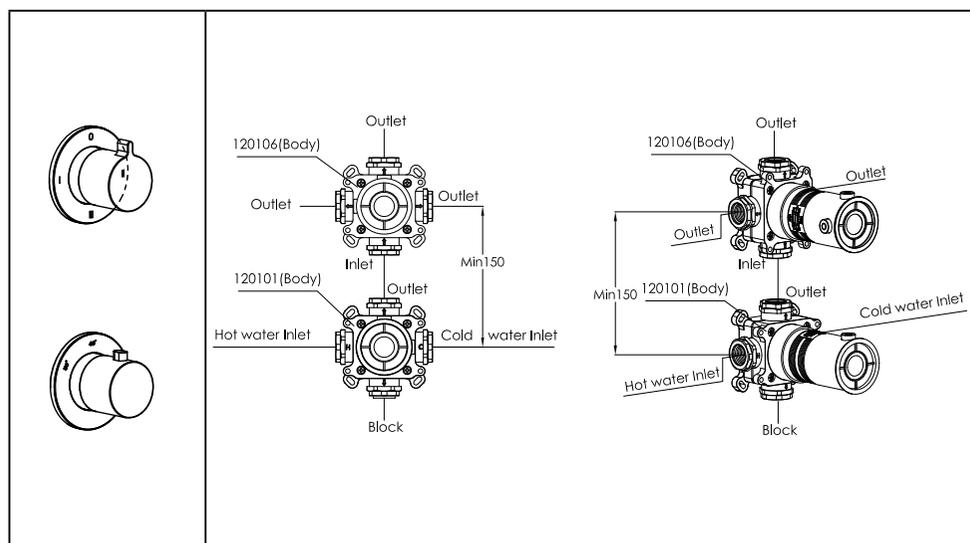




120101+120105+120103

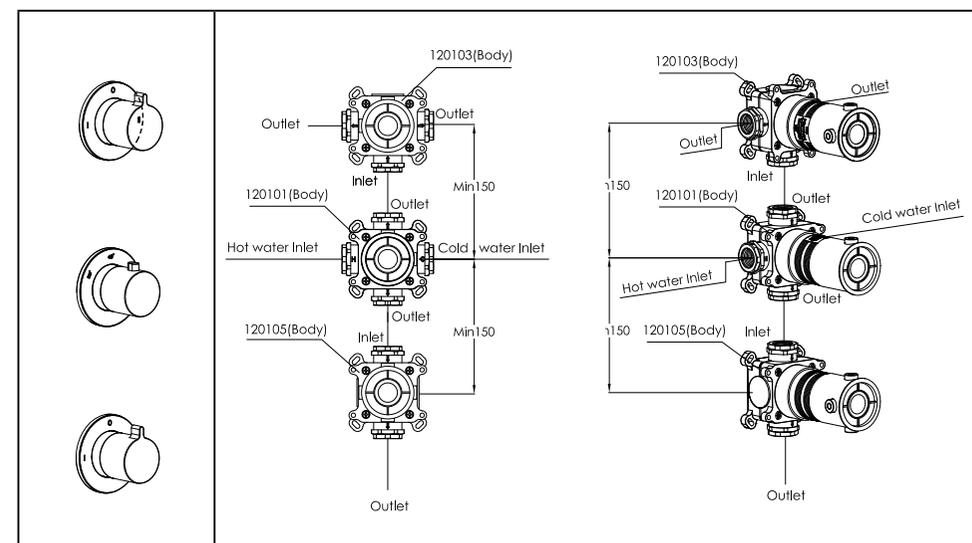

Horizontal mounting instructions - 2 and 3 outlet

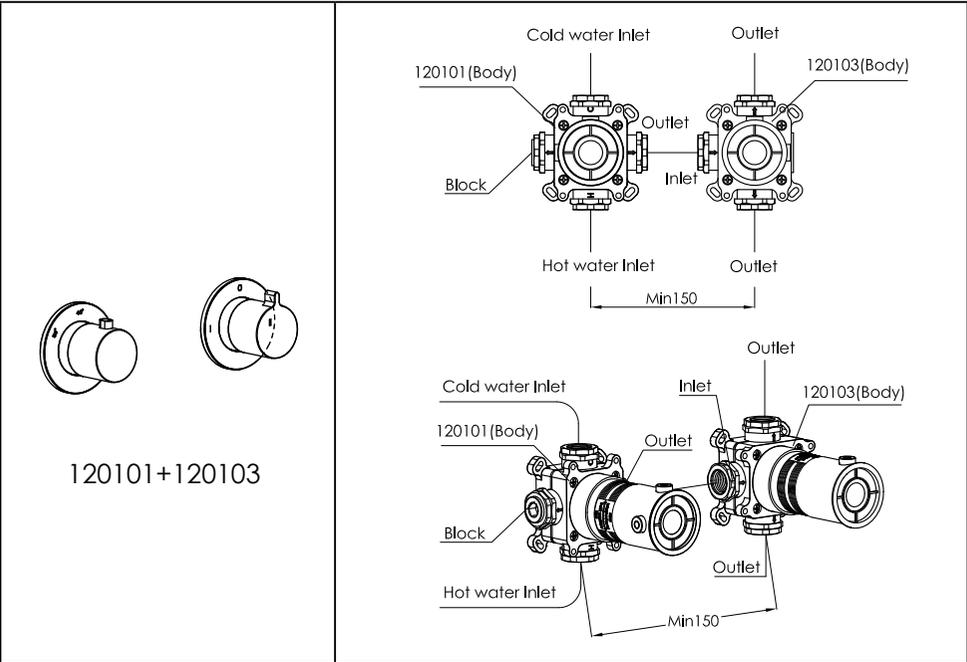


Horizontal mounting instructions - 2 and 3 outlet

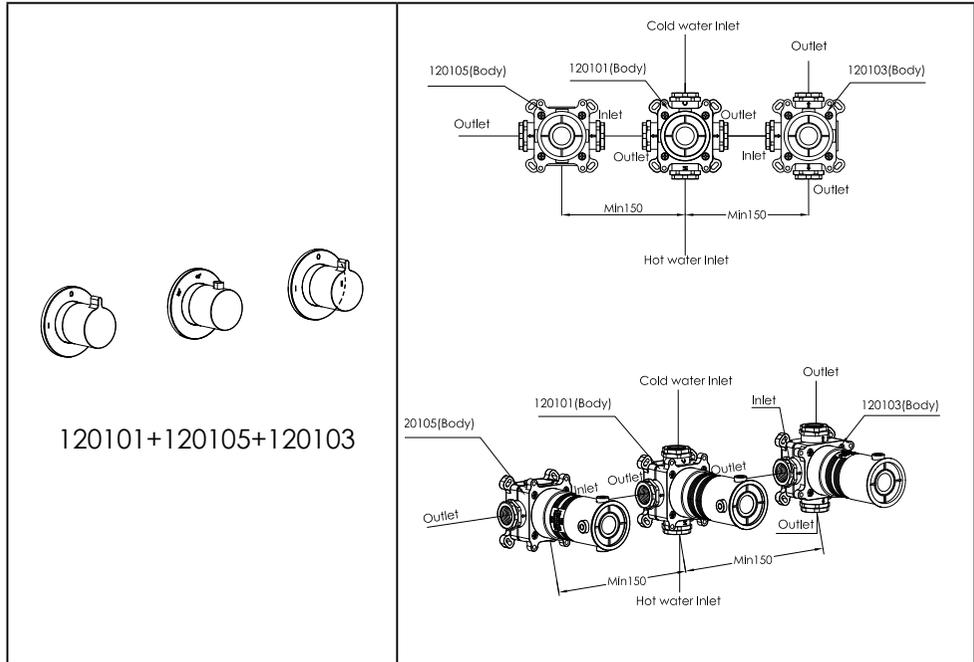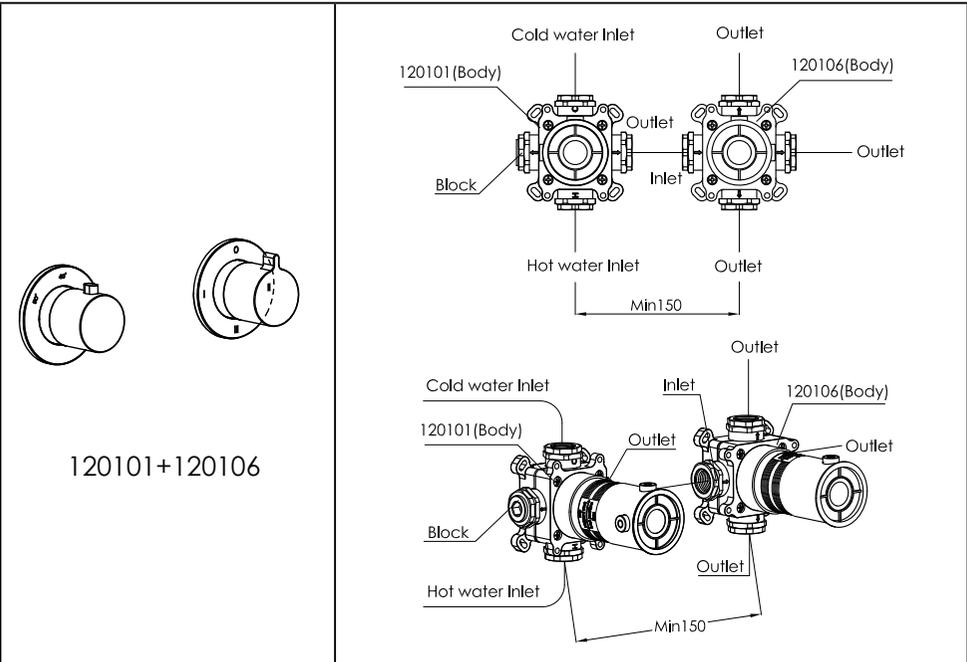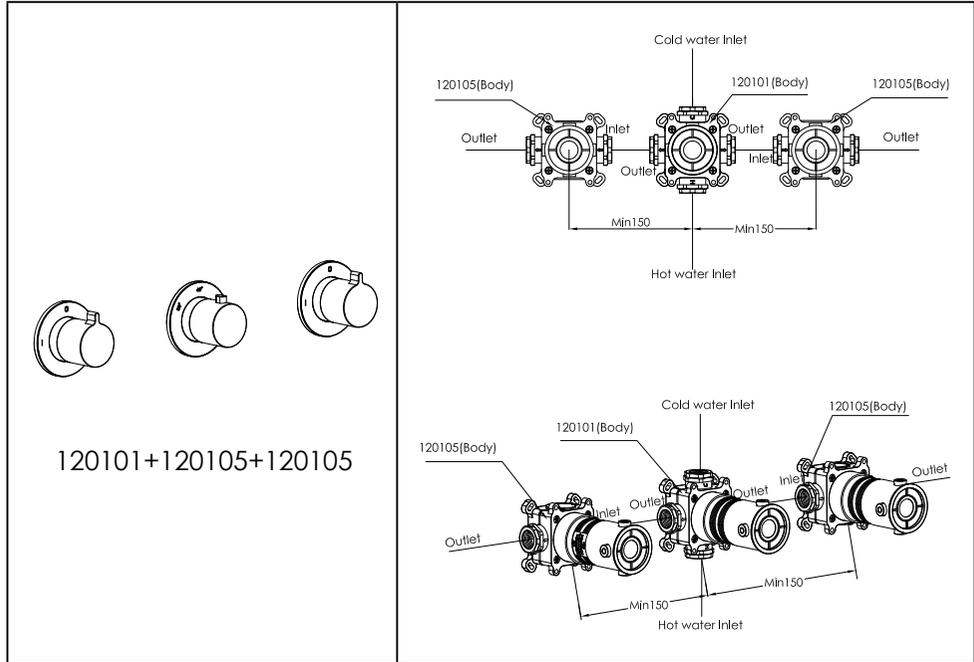

Vertical mounting instructions (Standard installation)

-2 outlet


120101+120108+120108

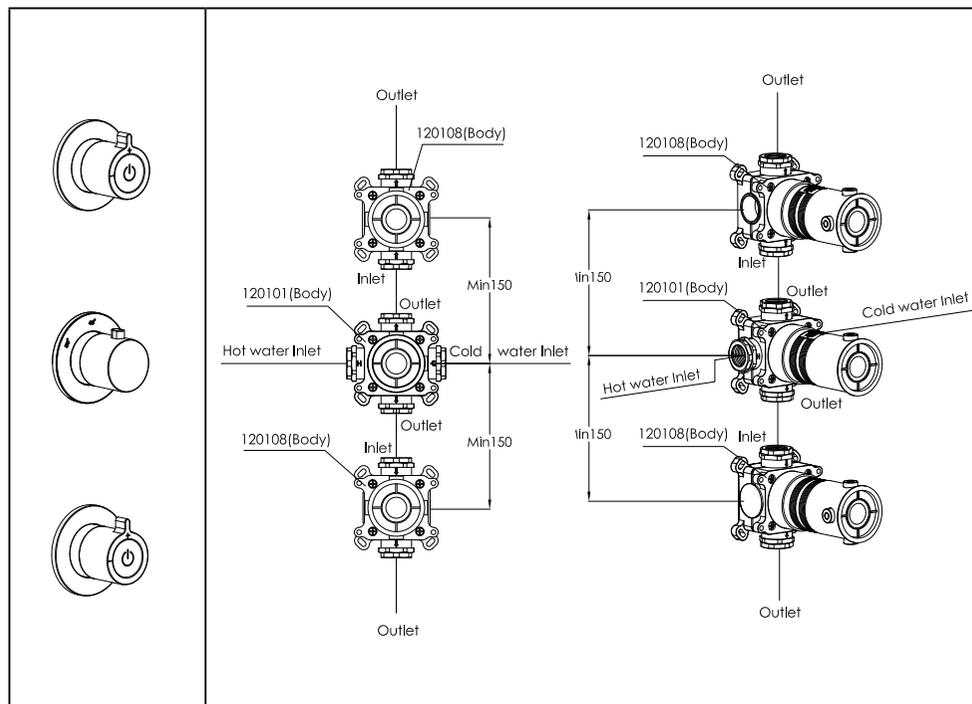

Horizontal mounting instructions


-2 outlet

120101+120108+120108

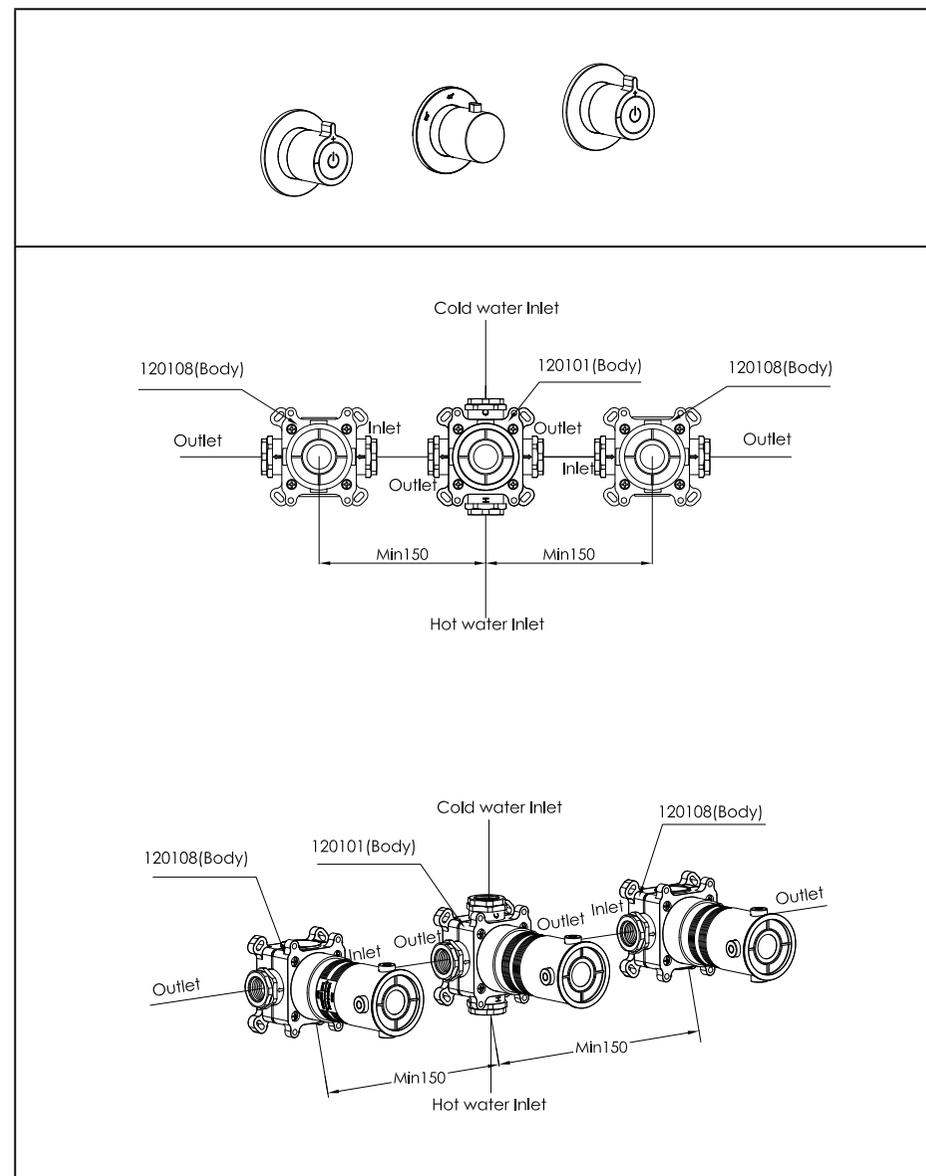


Cartridge replacement

120105 (01-06)

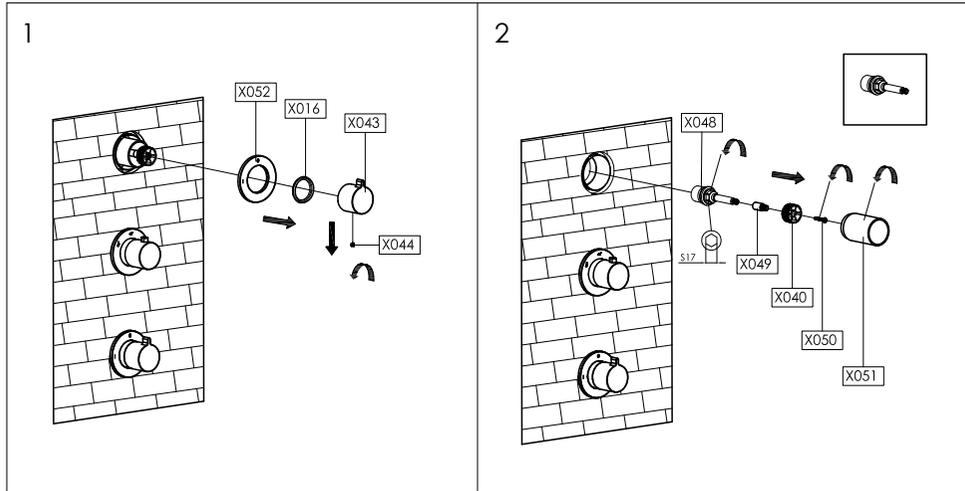


Cartridge replacement


120103 (01-06)

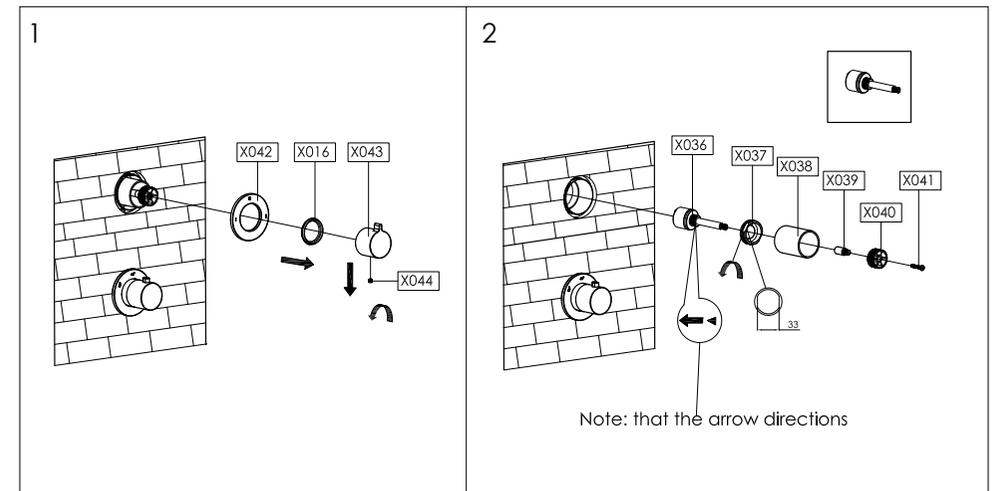

120108 (01-06)

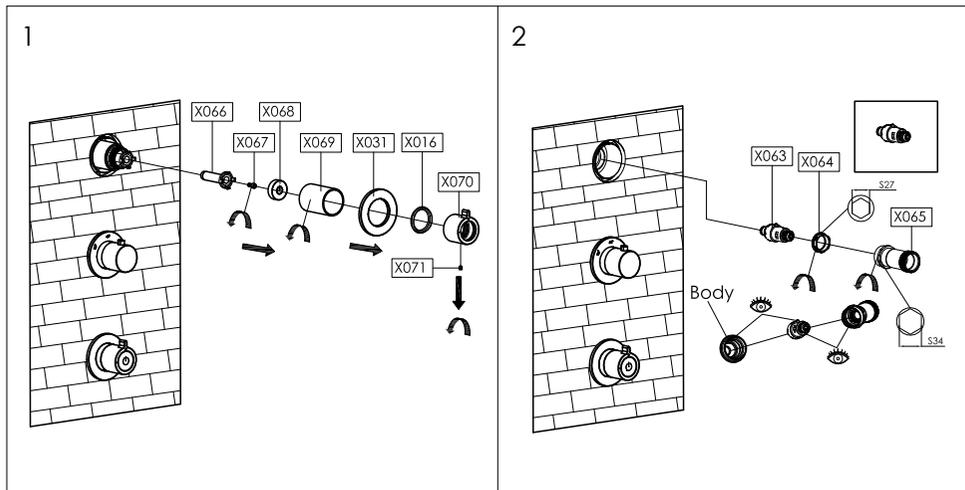


120106 (01-06)

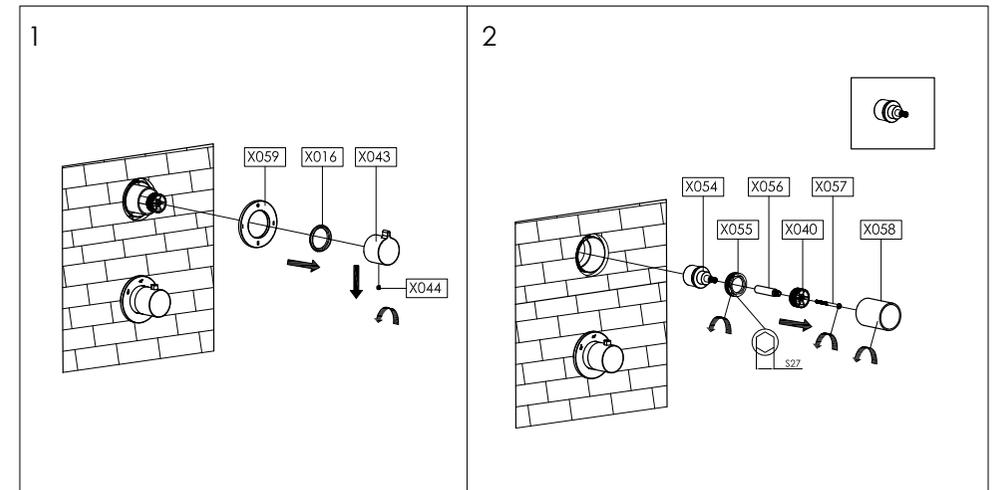


Cartridge replacement (Horizontal installation)

120103 (01-06)

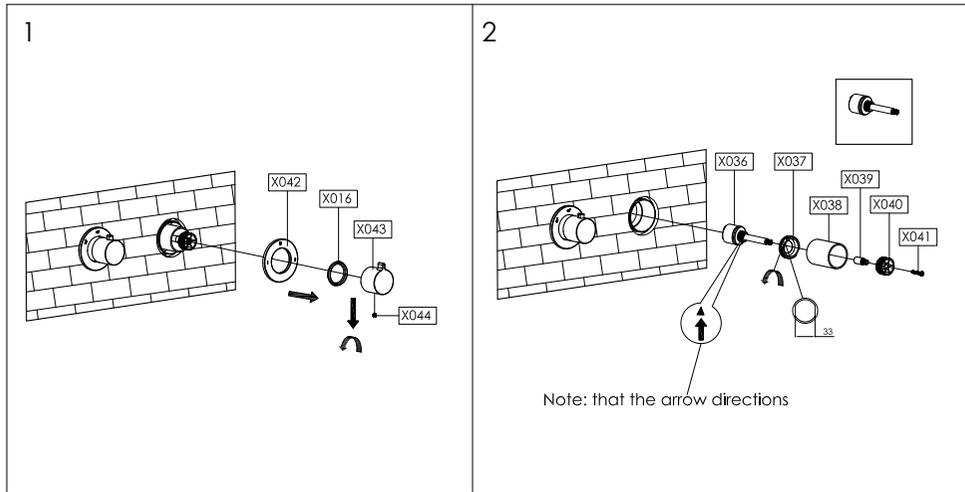

120106 (01-06)

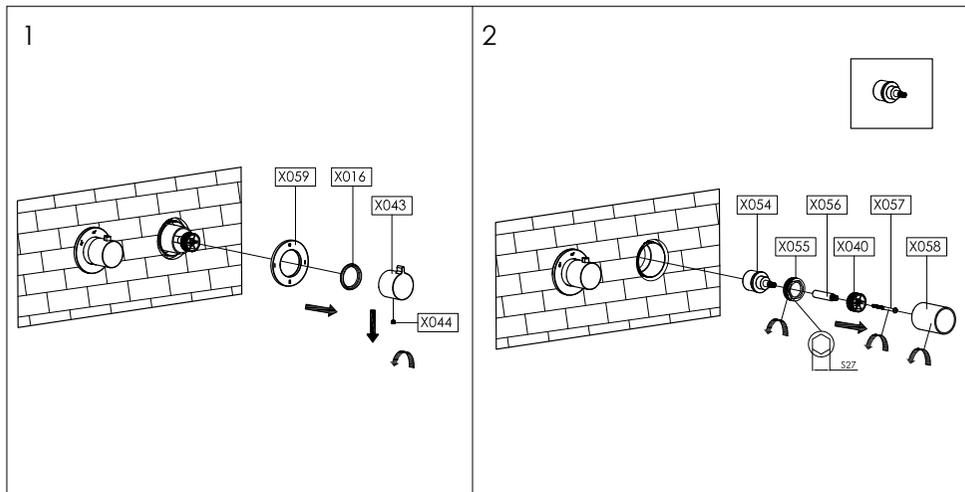

MAINTENANCE

CARE OF THE MIXER

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth **ONLY** and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

